

**Lumagen Tek Tip 3**  
**Remote Codes**  
**4/10/2007**

This is a complete list of Lumagen remote codes listed in binary number order.

Name	IR-binary	IR-HEX	RS232
	0010 10 0000 00	280	
1:85	0010 00 0001 00	204	j
4:3	0010 00 0010 00	208	n
1	0010 10 0011 00	28C	1
5	0010 00 0100 00	210	5
9	0010 10 0101 00	294	9
MEMC	0010 10 0110 00	298	c
ALT	0010 00 0111 00	21C	#
<	0010 00 1000 00	220	<
FREEZE	0010 10 1001 00	2A4	z
PIP-OFF	0010 10 1010 00	2A8	e
YPRPB	0010 00 1011 00	22C	Y
480P	0010 10 1100 00	2B0	A
768P	0010 00 1101 00	234	E
VRES	0010 00 1110 00	238	V
4:3NZ	0010 10 1111 00	2BC	[

Name	IR-binary	IR-HEX	RS232
	0010 00 0000 01	201	
2:35	0010 10 0001 01	285	W
LBOX	0010 10 0010 01	289	l
2	0010 00 0011 01	20D	2
6	0010 10 0100 01	291	6
0	0010 00 0101 01	215	0
MEMD	0010 00 0110 01	219	d
^	0010 10 0111 01	29D	^
OK	0010 10 1000 01	2A1	<enter>
v	0010 00 1001 01	225	V
PIP-SEL	0010 00 1010 01	229	p
RGBHV	0010 10 1011 01	2AD	R
540P	0010 00 1100 01	231	B
840P	0010 10 1101 01	2B5	F
VRATE	0010 10 1110 01	2B9	~
LBOXNZ	0010 00 1111 01	23D	]

Name	IR-binary	IR-HEX	RS232
	0010 00 0000 10	202	
NLS	0010 10 0001 10	286	N
16:9	0010 10 0010 10	28A	w
3	0010 00 0011 10	20E	3
7	0010 10 0100 10	292	7
MEMA	0010 00 0101 10	216	a
+10	0010 00 0110 10	21A	+
ZONE	0010 10 0111 10	29E	Z
>	0010 10 1000 10	2A2	>
CLR	0010 00 1001 10	226	!
PIP-SWAP	0010 00 1010 10	22A	r
RGBS	0010 10 1011 10	2AE	S
600P	0010 00 1100 10	232	C
1080P	0010 10 1101 10	2B6	G
HRATE	0010 10 1110 10	2BA	H
16:9NZ	0010 00 1111 10	23E	*

Name	IR-binary	IR-HEX	RS232
HELP	0010 10 0000 11	283	U
ON	0010 00 0001 11	207	%
STBY	0010 00 0010 11	20B	\$
4	0010 10 0011 11	28F	4
8	0010 00 0100 11	213	8
MEMB	0010 10 0101 11	297	b
PREV	0010 10 0110 11	29B	P
MENU	0010 00 0111 11	21F	M
INPUT	0010 00 1000 11	223	i
EXIT	0010 10 1001 11	2A7	x
PIP-MODE	0010 10 1010 11	2AB	m
RGsB	0010 00 1011 11	22F	T
720P	0010 10 1100 11	2B3	D
1080I	0010 00 1101 11	237	l
ASPECT	0010 00 1110 11	23B	=
1.85NZ	0010 10 1111 11	2BF	/